


REDEL-Adapter Anschlußbelegung / pin assignment

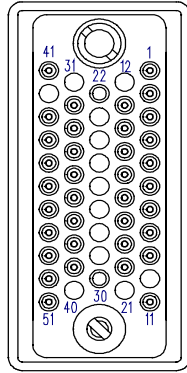

EGG.3B.665.ZZM

EGG.3B.665.ZZM

Anschlußstecker / HV cable connector			freies Kabelende / wire end	
Belegung / pin assignment			Bezeichnung/Kabelaufdruck	
EHQ floating GND	EHQ common GND	PIN	marking of the cable	
nc	C-RTN	1	1	1
CH0 HV	CH0 HV	2	2	2
CH1 HV	CH2 HV	3	3	3
CH2 HV	CH4 HV	4	4	4
CH3 HV	CH6 HV	5	5	5
CH4 HV	CH8 HV	6	6	6
CH5 HV	CH10 HV	7	7	7
CH6 HV	CH12 HV	8	8	8
CH7 HV	CH14 HV	9	9	9
nc	nc	10		
nc	C-RTN	11	0 1	1 0
nc	nc	12		
CH0 RTN	CH1 HV	13	1 1	1 1
CH1 RTN	CH3 HV	14	2 1	1 2
CH2 RTN	CH5 HV	15	3 1	1 3
CH3 RTN	CH7 HV	16	4 1	1 4
CH4 RTN	CH9 HV	17	5 1	1 5
CH5 RTN	CH13 HV	18	6 1	1 6
CH6 RTN	CH13 HV	19	7 1	1 7
CH7 RTN	CH15 HV	20	8 1	1 8
nc	nc	21		
SL 1	SL 1	22	6 1	1 6
nc	nc	23		
nc	nc	24		
nc	nc	25		
nc	nc	26		
nc	nc	27		
nc	nc	28		
nc	nc	29		
SL 2	SL 2	30	0 2	2 0
nc	nc	31		
CH15 RTN	CH31 HV	32	1 2	2 1
CH14 RTN	CH29 HV	33	2 2	2 2
CH13 RTN	CH27 HV	34	3 2	2 3
CH12 RTN	CH25 HV	35	4 2	2 4
CH11 RTN	CH23 HV	36	5 2	2 5
CH10 RTN	CH21 HV	37	6 2	2 6
CH9 RTN	CH19 HV	38	7 2	2 7
CH8 RTN	CH17 HV	39	8 2	2 8
nc	nc	40		
nc	C-RTN	41	6 2	2 6
nc	nc	42		
CH15 HV	CH30 HV	43	0 3	3 0
CH14 HV	CH28 HV	44	1 3	3 1
CH13 HV	CH26 HV	45	2 3	3 2
CH12 HV	CH24 HV	46	3 3	3 3
CH11 HV	CH22 HV	47	4 3	3 4
CH10 HV	CH20 HV	48	5 3	3 5
CH9 HV	CH18 HV	49	6 3	3 6
CH8 HV	CH16 HV	50	7 3	3 7
nc	C-RTN	51		nc